



RX - 2505AC

All-In-One Energy Storage System Quick Installation Guide

- This document is subject to change from time to time due to product upgrades or other reasons. This document is not a substitute for the user manual or safety instructions.
- Please read the user manual and related standards before undertaking any operation / commissioning. Please take time to access http://www.redxenergy.com.au or scan the QR code for the latest quick installation guide.
- The installation must be completed by well trained, qualified professional technicians. Technicians must be familiar with safety specifications of electrical systems.
- Prior to commencement, check whether the goods match the packing list, if there is any damage to any items or components missing, please contact the Distributor / Dealer or Redx.
- The power cables must be intact and well insulated. Please use insulating gloves and wear personal protective equipment at all times when installing this Product.
- Failure to comply with any of the above requirements may result in injury to personnel or damage to equipment.

Redx shall not be liable for any loss of life or damage caused by failure to comply with the requirements of this document and user manual.

Safety Statement



Shock hazard!

- Exposure to sunlight and the elements is not recommended
- All electrical connections must be completed by professional technicians only.
- All electrical connections must meet local and national electrical standards.
- Only connect the system to the grid with local authority approval .
- Warranty will be void if the cover is removed. Improper opening of the unit may also result in serious electrical shock or injury to personnel.

⚠ Warning

All safety labels, warning labels, and nameplates must be clear and visible and cannot be removed or modified.

⚠ Warning

Burn hazard!

Do not touch the inverter module for maintenance immediately after long time operation.

⚠ Notice

The country settings and protection parameters must be set by professional technician based on local power grid standards.

Incorrect country settings may affect the operation of the unit adversely and may result in failure to meet the local standard.

Warning Label



Disconnect all external power supplies before maintainace.



Hot surfaces!



High Voltage! Only professional and qualified technicians are allowed to install and operate



Read all instructions before operation.





Wait for 5 minutes before touching the internal conductive components after system has been turned off and disconnected from grid.

Packing List

















RJ45 Connector (1PCS)



• This drawing is for reference only. Please refer to the actual product.

Installation Location









145












Dimension

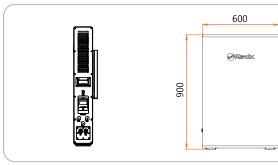





http:// www.redxenergy.com.au/downloads/




http:// www.redxenergy.com.au




The size and parameters of the product are subject to change without notice.

Installation

Avoid water and electricity when drilling, bit size φ8mm, drilling depth 40mm.

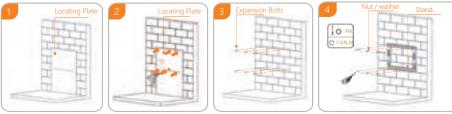

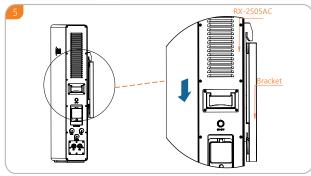




• This figure is for reference only, please refer to the actual product!


Grounding Connection




RS485 Installation

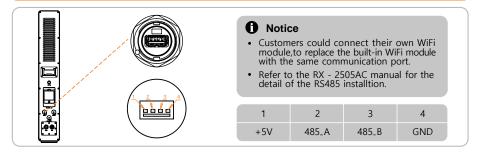



CT or smartmeter Installation (choose one of them)

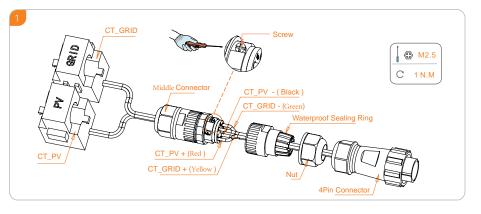


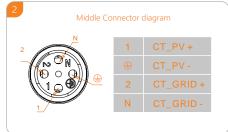




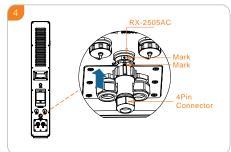


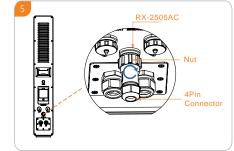

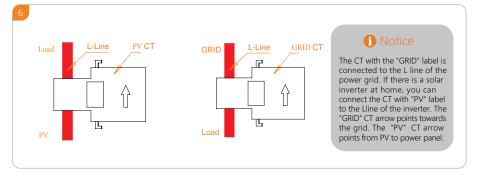



On/Off grid installation

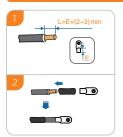


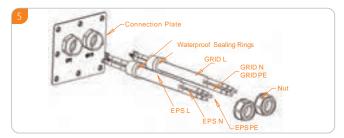




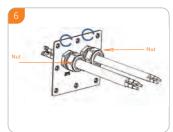


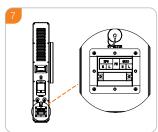


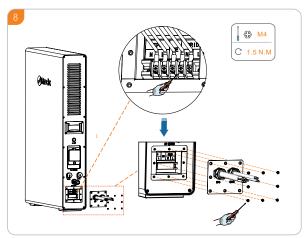

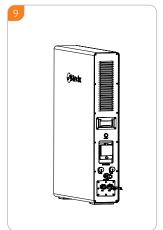

DRM0 Installation

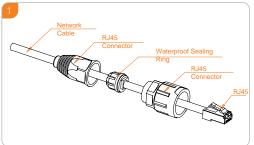

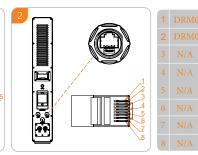

Pre - Operation Inspection

	Checking Items	Result	
		YES	NO
1	The installation location meets the requirement.		
2	The system has been securely installed.		
3	Sufficient space for heat dissipation. No objects are left in the system.		
4	System wiring is correct and firm. Refer to 240V diagram for more information.		
(5)	Cables are properly installed and well protected without any damage.		
6	The selection of AC circuit breaker meets local standard.		
7	All terminals have been sealed.		
8	Warning labels are not covered without alteration or occlusion.		

Operation

Following the steps to start the system.

Step ①: Connect to the grid.

Step ②: Turn on the battery isolation circuit breaker.

 $\mathsf{Step}\, 3\!\!\! 3$: Turn on the power button.

Step ④: Download the Redx Power App, QR Code for App download is on flip side of the document

Step ⑤: Complete all steps in the App instructions.

LED Status Operation----Green RUN Fault----Red Monitoring ----Green(Flash) RUN VPP Remote Control ----Blue(Flash) VPP Operating Grid ----Green status GRID GRID No Grid ----Blue BATT BAT Charge---Green BAT Discharge---Blue SOC **Battery Capacity**

⚠ Notice

• If the startup fails, refer to "Troubleshooting" in the user manual. For details about LED indicators, refer to the user manual.