




## Breaker Installation

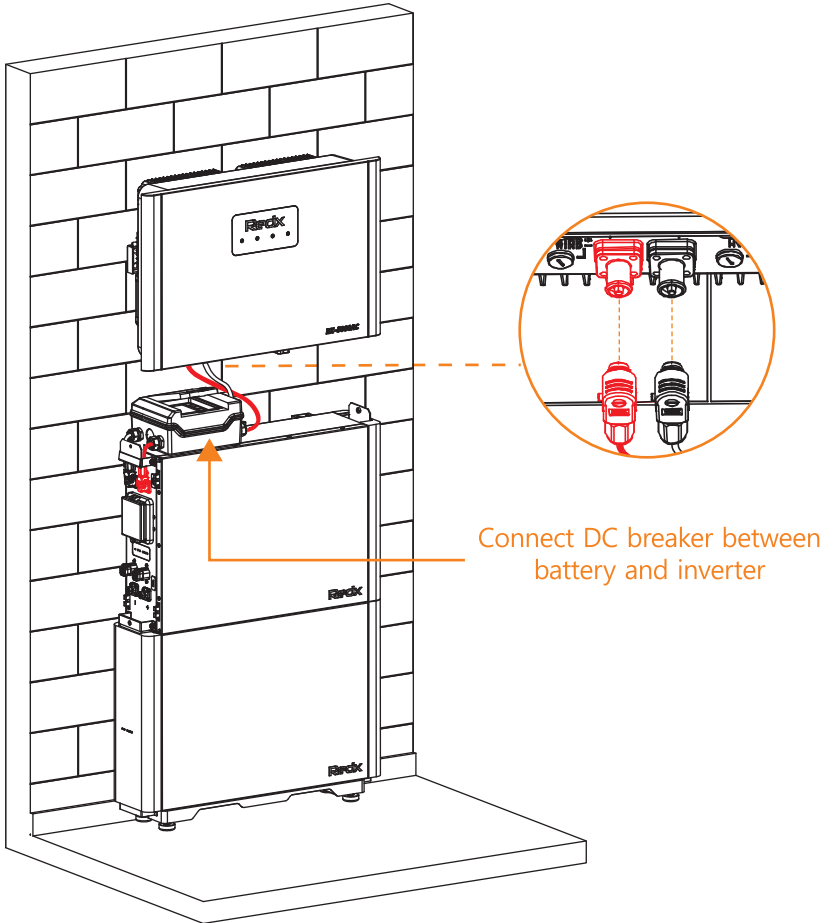

Connect DC breaker between  
battery and inverter